


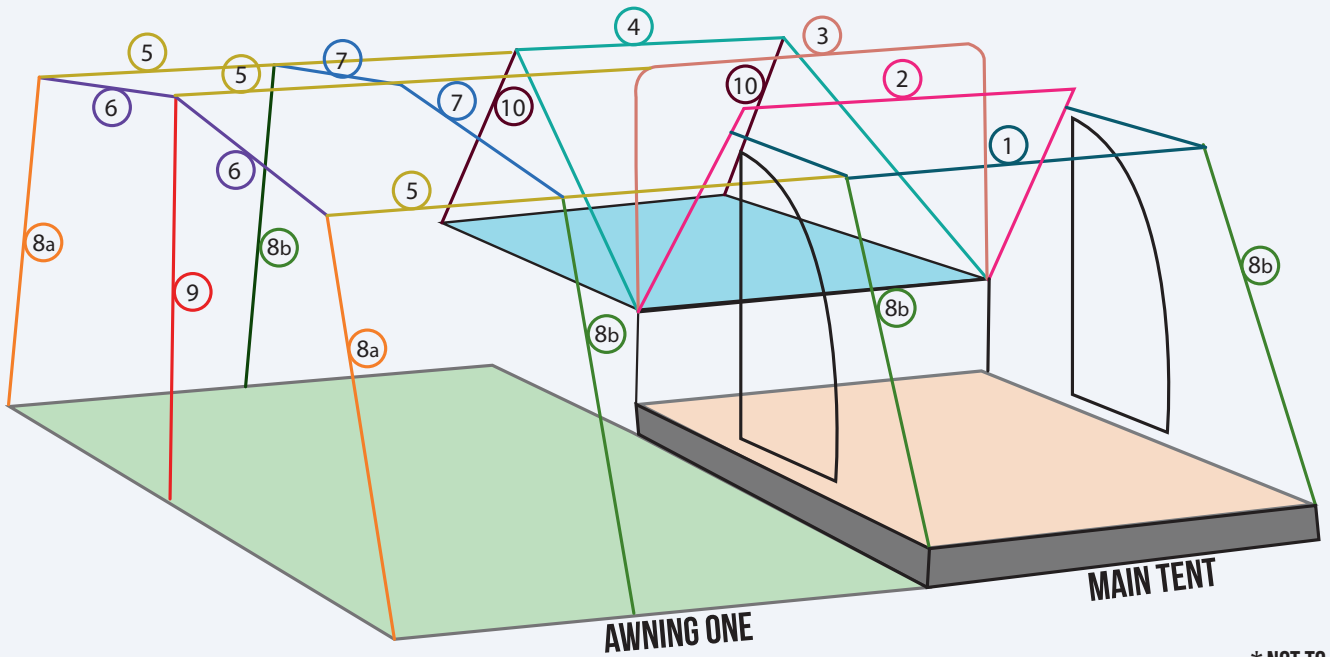
















# EZYTRAIL EDEN LX TENT POLE DIAGRAM




\* NOT TO SCALE


## KEYS

 NO# 1	 NO# 5	 NO# 8B	 MAIN TENT	 HARD FLOOR
 NO# 2	 NO# 6	 NO# 9	 AWNING 1	 MAIN BED
 NO# 3	 NO# 7	 NO# 10		
 NO# 4	 NO# 8A			

### MAIN TENT

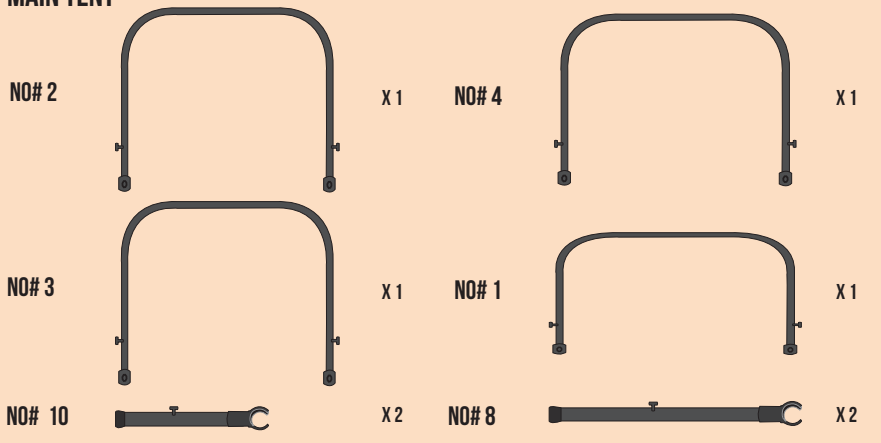

### AWNING ONE

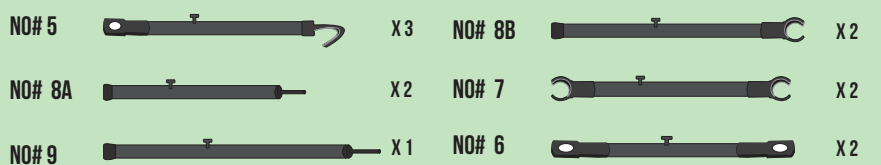

### EZY HINT:

Ezytrail advises that the Camper Trailer Tent be set up at least once before your first camping adventure to allow yourself to become comfortable and confident with the setup of your Camper Trailer.

Prior to embarking on your first camping trip make sure you weather your canvas by wetting it down with a hose in order to avoid leaks.

Happy Camping!

